



### How to Order



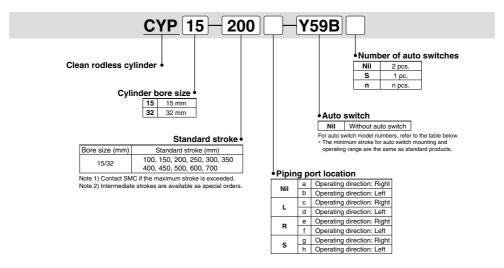

# Piping port location

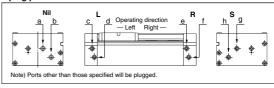

PLC: Programmable Logic Controller

### Auto Switch Specifications (Refer to the WEB catalog for detailed specifications and auto switches not in the following table.)

Туре	Cooriel	Electrical	Indicator	140.	L	oad vo	tage	Auto switch model	Lead v	vire leng	th (m)*		
	Special function		light	19	DC		AC	Electrical entry direction	0.5	3	5	Applicable load	
	Idilottoti	entry	ligit	(Output)	"		AC	In-line	Nil	(L)	(Z)		
Reed auto switch	_	Grommet	Yes	2-wire	24 V	12 V	100 V	Z73	•	•	•	_	Relay, PLC
Solid state auto switch		Grommet	Yes	3-wire (NPN)	24 V	5 V, 12 V		Y59A	•	•	0	IC circuit	Relay, PLC
Solid state auto switch	_	Gioinnet	165	2-wire	] 24 V	12 V	_	Y59B	•	•	0		nelay, FLC

<sup>\*</sup> Lead wire symbol 0.5 m.....Nil (Example) Y59B 3 m.....L Y59BL 5 m.....Z Y59BZ


Refer to page 889 for the applicable auto switch list.

<sup>\*\*</sup> Solid state auto switches marked with O are produced upon receipt of order.

### **Specifications**

Bore size (mm)	15	32				
Fluid	Air and i	nert gas				
Action	Double acting					
Proof pressure	0.5 MPa					
Operating pressure range	0.05 to 0	0.3 MPa				
Ambient and fluid temperature	-10 to 60°C	(No freezing)				
Piston speed	50 to 30	00 mm/s				
Lubrication	Non-	lube				
Stroke adjustable range	±1 mm on each side (total ±2 mm)					
Cushion	Sine cushion	(Air cushion)				
Piping port size	M5 x 0.8	Rc1/8				
Grease	Fluorine	grease				
Cleanliness class (ISO class)	Cla	Class 4				

### Auto Switch Proper Mounting Position (Detection at Stroke End)

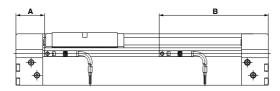



### **Auto Switch Proper Mounting Position**

Auto switch model	P	١	E	3					
Cylinder model	D-Z73	D-Y5□	D-Z73	D-Y5□					
CYP15	24.	.5	9	93.5					
CYP32	33		122						

Note) The above mentioned values are indicated as a guide for auto switch mounting positions for stroke end detection. When actually mounting an auto switch, adjust the position after confirming the operating state of the auto switch.

### **Dimensions**

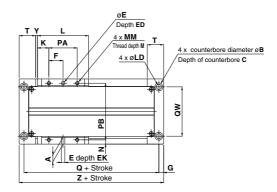

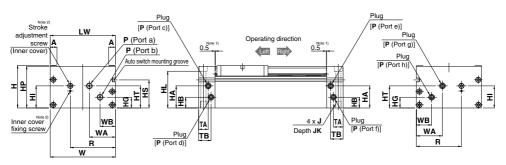

Model	Α	В	С	E	ED	EK	F	G	Н	HA	HB	HG	HI	HL	HP	HS	HT	J	ı	JK	
CYP15	8	9.5	5.4	4H9 +0.030	9.5	4	12.5	6.5	45	19.5	8.5	8.5	23	38.6	44	27	19.5	M6	x 1	10	Г
CYP32	12	14	8.6	6H9 +0.030	13	6	25	8.5	75	39	19	19	39	64.9	73.5	49.5	39	M10	x 1.5	12	Т
V 02				0.10																	_
Model	L	LD	LW	ММ	М	N	F	P	PA	РВ	Q	QW	R	Т	TA	ТВ	W	WA	WB	Υ	T
	<b>L</b> 67					<b>N</b> 4.5	_				<b>Q</b> 105	<b>QW</b>	<b>R</b> 45	<b>T</b> 23					<b>WB</b>	<b>Y</b> 2.5	Į

Note 1) These dimensions indicate the protrusion of the bumper.

Note 2) Refer to the specific product precautions (stroke adjustment and cushion effect (sine cushion)).

Grippers

# **⚠** Specific Product Precautions

Be sure to read this before handling.

### Handling

## **⚠** Caution

- Open the inner package of the double packaged clean series inside a clean room or other clean environment.
- Perform parts replacement and disassembly work in a clean room after exhausting compressed air in the piping outside the clear room

### Mounting

# 

- 1. Take care to avoid striking the cylinder tube with other objects or handling it in a way that could cause deformation. The cylinder tube and slider units have a non-contact construction. For this reason, even a slight deformation or slippage of position can cause malfunction and loss of durability, as well as a danger of degrading the particle generation characteristics.
- Do not scratch or gouge the linear guide by striking it with other objects.

Since the linear guide is specially treated for maximum suppression of particle generation due to sliding, even a slight scratch can cause malfunction and loss of durability, as well as degradation in the particle generation characteristics.

- Since the slide table is supported by precision bearings, do not apply strong impacts or excessive moment when mounting workpieces.
- 4. Be sure to operate the cylinder with the plates on both sides

Avoid applications in which the slide table or only one plate is secured.

When changing the ports to be used, be sure that unused ports are securely sealed.

Take sufficient care in sealing unused ports, because if ports are not properly sealed, air can leak from the ports and particle generation characteristics can be degraded.

### Operation

# **⚠** Caution

1. The maximum operating pressure of the clean rodless cylinder is 0.3 MPa.

If the maximum operating pressure of 0.3 MPa for the clean rodless cylinder is exceeded, the magnetic coupling could be broken, causing a danger of malfunction or degradation of particle generation characteristics, etc.

 The product can be used with a direct load applied within the allowable range, but careful alignment is necessary when connecting to a load with an external guide

Since alignment variations increase as the stroke gets longer, use a connection method which can absorb these variations and consider measures to control particle generation.

### Operation

## **⚠** Caution

- 3. When used vertically for applications, use caution regarding dropping due to separation of the magnetic coupling. When used vertically for applications, use caution as there is a possibility of dropping due to separation of the magnetic coupling if a load (pressure) greater than the allowable value is applied.
- 4. Do not operate with the magnetic coupling out of position. If the magnetic coupling is out of position, push the external slider by hand (or the piston slider with air pressure) back to the proper position at the stroke end.
- 5. Do not supply lubrication, as this is a non-lube product. The interior of the cylinder is lubricated at the factory, and lubrication with turbine oil, etc., will not satisfy the product's specifications.
- 6. Never apply lubricant newly.

Never apply lubricant newly, as there may be a degradation of particle generation characteristics or operation characteristics.

### Speed Adjustment

## **△** Caution

 A throttle valve for clean room use is recommended for speed adjustment. (Please consult with SMC regarding equipment and methods to be used.)

Speed adjustment can also be performed with a meter-in or meter-out type speed controller for clean room use, but it may not be possible to obtain smooth starting and stopping operation.

# Throttle valves and dual speed controllers for recommended speed adjustment of CYP cylinders

	-		
	Series	Mo	del
Throttle valve	Oction	CYP15	CYP32
Metal body	Elbow type	10-AS1200-M5-X216	10-AS2200-01-X214
piping type	In-line type	10-AS1000-M5-X214	10-AS2000-01-X209
		10-AS1201F-M5-04-X214	10-AS2201F-01-04-X214
	Elbow type (Throttle valve)	10-AS1201F-M5-06-X214	10-AS2201F-01-06-X214
fitting	(Thiothe valve)		10-AS2201F-01-08-X214
a,≢		10-AS1301F-M5-04-X214	10-AS2301F-01-04-X214
g p	Universal type (Throttle valve)	10-AS1301F-M5-06-X214	10-AS2301F-01-06-X214
Resin body One-touch fi	(Thiothe valve)		10-AS2301F-01-08-X214
~ გ	In-line type	10-AS1001F-04-X214	10-AS2001F-04-X214
with	(Throttle valve)	10-AS1001F-06-X214	10-AS2001F-06-X214
	Dual type	10-ASD230F-M5-04	10-ASD330F-01-06
	(Speed controller)	10-ASD230F-M5-06	10-ASD330F-01-08

Note 1) For the selection method of the metal body piping type and the resin body type with One-touch fitting, refer to pages 1243 to 1304.

Note 2) For fittings used with the metal body piping type, refer to pages 1124 to 1231.

For vertical mounting, a system with a reduced pressure supply circuit installed on the down side is recommended. (This is effective against upward starting delays and for air saving.)



# **⚠ Specific Product Precautions**

Be sure to read this before handling.

### Stroke Adjustment and Cushion Effect (Sine Cushion)

### **⚠** Caution

1. A sine cushion function (for smooth start and soft stop) is included in the standard specifications.

Due to the nature of a sine cushion, adjustment of the cushion effect is not possible. There is no cushion needle adjustment as in the case of conventional cushion mechanisms.

The stroke adjustment is a mechanism to adapt the slide table's stroke end position to a mechanical stopper on other equipment, etc.

(Adjustment range: Total of both sides ±2 mm)

To ensure safety, perform adjustment after shutting off the drive air, exhausting the residual pressure and implementing drop prevention measures.


- 1) Loosen the inner cover holding screw with a hexagon wrench,
- 2) To align the position with a mechanical stopper on other equipment, rotate the stroke adjustment screw (inner cover) to the left or right with a hexagon wrench to move the inner cover back and force. Approximately 1 mm of adjustment is possible with one rotation.
- The maximum adjustment on one side is ±1 mm. A total adjustment of approximately ±2 mm is possible with one rotation.
- After completing the stroke adjustment, tighten the inner cover holding screw with a hexagon wrench, etc.

#### Inner cover holding screw tightening torque [N·m]

Model	Thread size	Tightening torque	Hexagon wrench size
CYP15	M3 x 0.5	0.3	1.5
CYP32	M6 x 1	2.45	3

### Stroke adjustment screw

Model	Hexagon wrench size
CYP15	2.5
CYP32	4

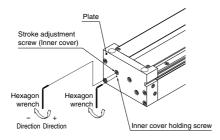

#### Maintenance

# **⚠** Caution


- 1. Never disassemble the cylinder tube or linear guide, etc.
- If disassembled, the slide table may touch the outside surface of the cylinder tube, resulting in a degradation of particle generation characteristics.
- 2. Please consult with SMC when replacing seals and bearings (wear rings).


### **Particle Generation Characteristics**

# 

 In order to maintain the particle generation class, use operation of 500 thousand cycles or travel distance of about 400 km as a standard. (Graph (1) below)

If operation is continued beyond the recommended values, lubrication failure of the linear guide and loss of particle generation characteristics may occur.

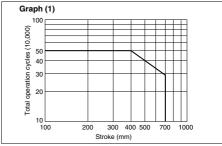

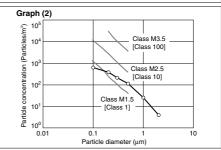

- Note 1) This chart shows the level of cleanliness inside the measurement chamber.
- Note 2) The vertical axis shows the number of particles per unit volume (1 m³) of air which are no smaller than the particle size shown on the horizontal axis.
- Note 3) The dotted lines show the upper concentration limit of the cleanliness class based on Fed.Std.209E-1992.
- Note 4) The plots indicate a 95% upper reliability limit value for time series data up to 500 thousand operation cycles. (Cylinder: CYP32-200, Workpiece weight 5 kg, Average speed: 200 mm/s)
- Note 5) The data above provides a guide for selection but is not guaranteed.